



## Installing Rivnuts

Your RivNut Setting Tool has a 1-1/4" bolt pre-installed in it- do not misplace this bolt, as it will be needed later.

### Hole Size required for RivNuts

1/4" RivNut- 21/64" hole

5/16" RivNut- 33/64" hole

3/8" RivNut- 33/64" hole

1. Thread a RivNut onto the Setting Tool's bolt as shown above and leave a 1/16" gap between the top of the RivNut and the bottom of the setting tool.
2. Insert the Rivnut into the hole in the mounting surface and tighten the bolt with a wrench until it is snug - you will use a box style wrench to hold the setting tool in place as you tighten the bolt. (Be careful not to overtighten the bolt and strip the threads inside of the RivNut.)
3. Remove the bolt from the RivNut tool and repeat steps 1 through 2 until all RivNuts are set.
4. NOTE If you have trouble inserting the RivNut into the hole, file the hole slightly with a round file until the RivNut fits tightly - be careful not to over-file.