

SERVICE BULLETIN

LUBRICATOR MAINTENANCE

NO. 5A

DATE: 02/28/06

RE: CLEANING THE PRESSURE LUBRICATOR

We recommend cleaning the pressure lubricator on your Go-Devil yearly. To disassemble the lubricator, unscrew the top one-quarter turn to remove the top and spring. Next pump grease into the shaft housing on the Go-Devil to push the piston out. Wipe the piston and plastic housing thoroughly with a paper towel. If necessary, use soap and water. **DO NOT USE A PETROLEUM SOLVENT** such as gasoline, varsol, kerosene, thinner or carburetor cleaner. These solvents will destroy these components! After cleaning install the piston and stretch the spring a little to give it a little more tension. Insert the spring and align the cap and screw on one-quarter turn. Pump grease into the shaft housing to fill the lubricator to $\frac{3}{4}$ full.